

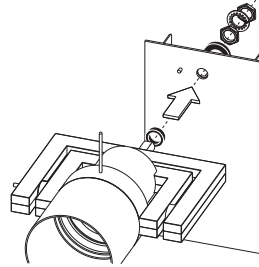


technics

diapason gearbox

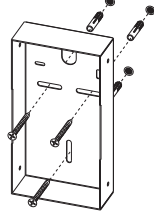

Always make sure the highest black ring is mounted against the Diapason

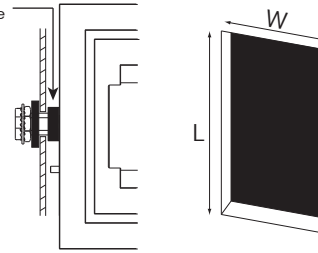

| Reference | Lampwattage | Dimensions | Cut Out L x W |
|-----------|-------------|----------------|---------------|
| kr99620x | no gear | 190 x 105 x 43 | 180 x 95 |
| kr99654x | no gear | 190 x 105 x 43 | 180 x 95 |
| kr99664x | no gear | 255 x 105 x 43 | 245 x 95 |
| kr99615x | 1 x 20W | 170 x 80 x 43 | 160 x 70 |
| kr99611x | 20 - 50W | 170 x 80 x 43 | 160 x 70 |
| kr99616x | 1 x 35W | 170 x 80 x 43 | 160 x 70 |
| kr99612x | 35 - 105W | 170 x 80 x 43 | 160 x 70 |
| kr99655x | 1 x 20W | 190 x 105 x 43 | 180 x 95 |
| kr99621x | 35 - 105W | 190 x 105 x 43 | 180 x 95 |
| kr99656x | 1 x 35W | 190 x 105 x 43 | 180 x 95 |
| kr99657x | 1 x 70W | 190 x 105 x 43 | 180 x 95 |
| kr99666x | 2 x 35W | 255 x 105 x 43 | 245 x 95 |
| kr99662x | 50 - 150W | 255 x 105 x 43 | 245 x 95 |
| kr99645x | 1x 10W | 170 x 80 x 43 | 160 x 70 |



1 installation

for installation on the wall:
provide holes and fix with screws

fix the diapason to the lit

cut out for wall installation


Please make sure that mains voltage is disconnected before proceeding!

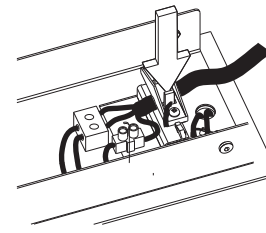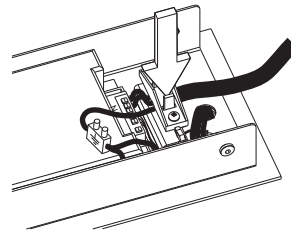


connect line cables to gear and earth cable to connector. fix strain relief to jam cable

in case of no gear : connect line cables and earth cable to connector. fix strain relief to jam cable


2 connection

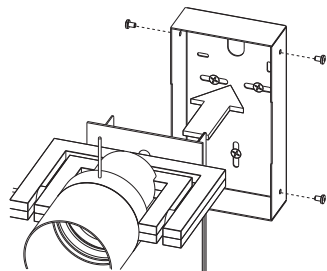


close the lit and fasten with screws

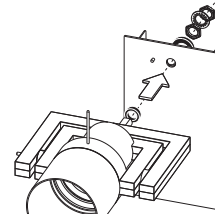

fix the diapason to the lit and make connection with the gear
in case of LED-driver kr99635x: connect red wire with + and black wire with -

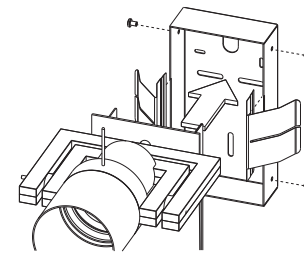


place the springs on the housing.
close the lit and fasten with screws

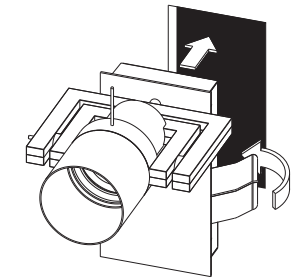

fold the springs inward and place in hole

3 installation

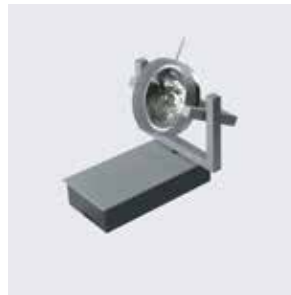

4 pictures

kreon nv

Industrieweg Noord 1152
3660 Oplabbek
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

Rev.date: 12/10/2016
KR8965001357