
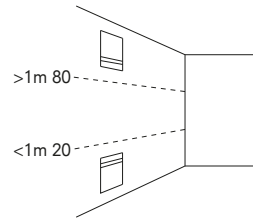


technics



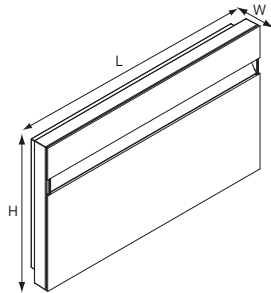


recommended orientation

Name	Reference	LxHxW	Voltage	Drive current	max. W
Rei 165	KR98321x	165x175x32,5	230V	350mA	4W
Rei 300	KR98322x	300x175x32,5	230V	350mA	8W

Leading and trailing edge dim

1 dimensions

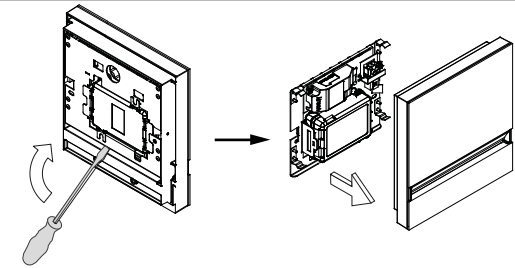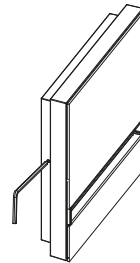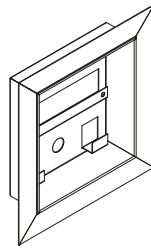


2 installation

In case of recessed see manual of plasterkit, KR8832201827


Make sure anti-theft screw is unlocked by using the allen key.

Use tool to open the luminaire from the back


3 installation

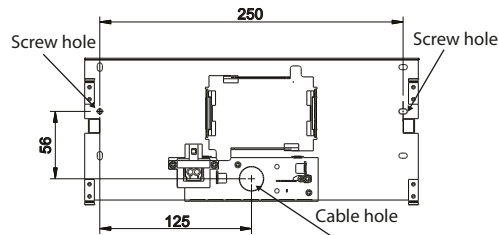


Hole pattern of rei 300

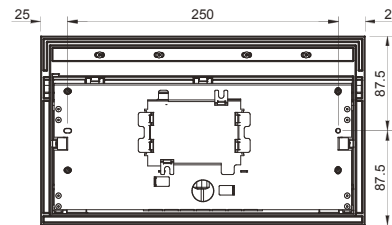

Mounting holes centred




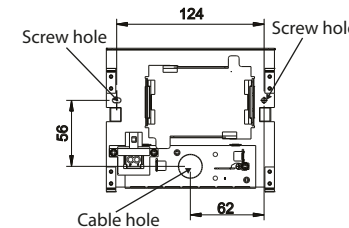


Hole pattern of rei 165

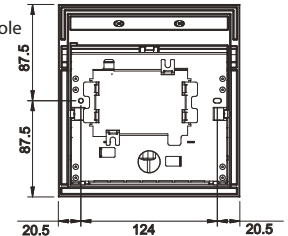

Mounting holes centred

IMPORTANT TO DEFINE THE POSITION OF THE CABLE ENTRY!

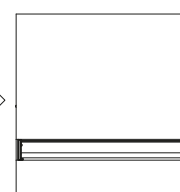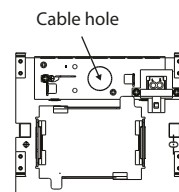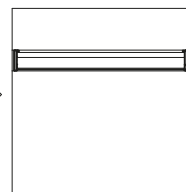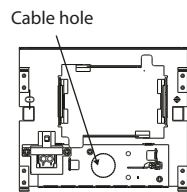

Please make sure that main voltage is disconnected before proceeding!

4 installation


Orientation mounting assembly

Orientation fixture as a downlight


Orientation mounting assembly

Orientation fixture as an uplight


technics

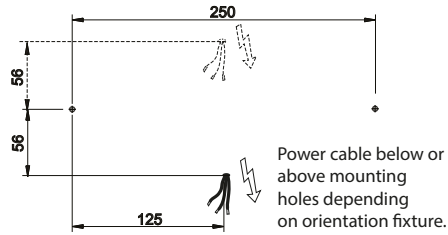

Power cable below or above mounting holes depending on orientation fixture.

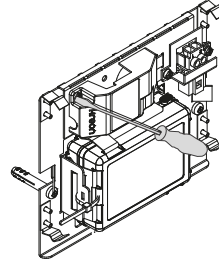


Remove plastic cover.

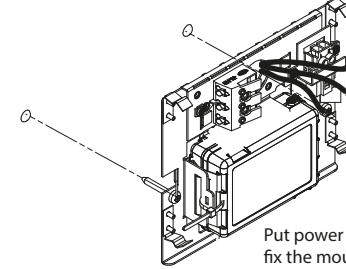


Put power cable through the hole, fix the mounting assembly to the wall, make connection to the connector and close the plastic cover.

5 installation


In case of surface mounted supply power from wall and drill two installation holes.

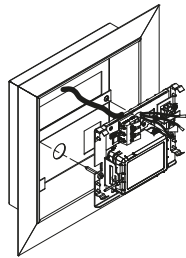

In case of plasterkit, put power cable through the correct hole, fix the mounting assembly to the plasterkit, make connection to the connector and close the plastic cover.

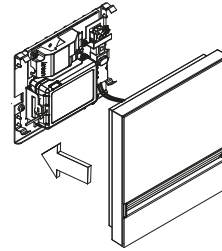


Connect the cover with the installation assembly and fix them together.

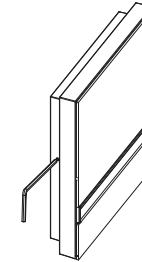

Lock the anti-theft screw by using the allen key.

6 installation

please remove the protection foil for dust after installation is finished

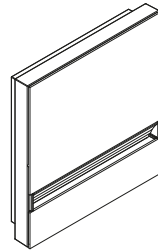

7 pictures