



## technics

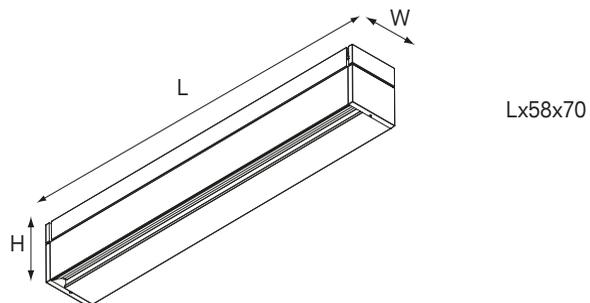


Name	Reference	L x W x H
Rei wallwasher surface profile - on/off	KR98325x	Lx58x70
Rei wallwasher surface profile - 1-10V	KR98385x	Lx58x70
Rei wallwasher surface profile - dali (No touch dim)	KR98355x	Lx58x70
Rei downlight surface profile - on/off	KR99325x	Lx58x70
Rei downlight surface profile - 1-10V	KR99385x	Lx58x70
Rei downlight surface profile - dali (No touch dim)	KR99355x	Lx58x70

## 1 dimensions

When the fall safety is unlocked, support the profile to avoid falling.

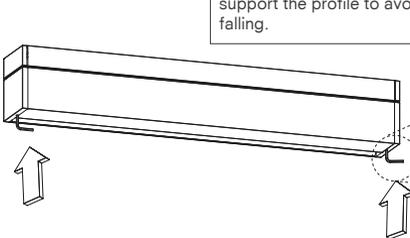

Push allen key until end.


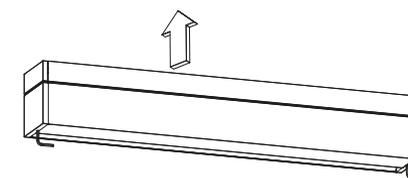


## 2 installation

Insert allen key at both sides, now the fall safety is unlocked. Caution: support the profile to avoid falling.

Keep both allen keys inserted whole the time during deinstallation.




Pull at the upper extrusion to open the profile.

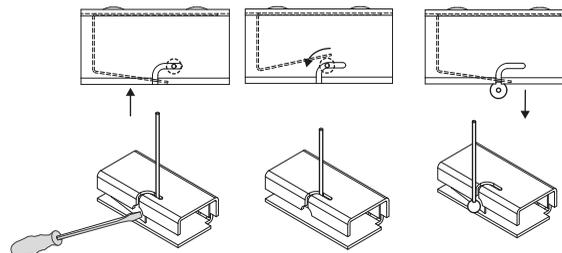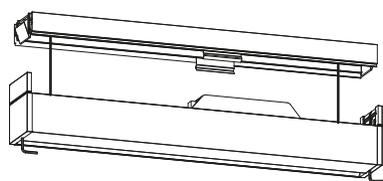

Please make sure that main voltage is disconnected before proceeding! ⚡

## 3 installation

Remove cable from fall safety at both ends. When profile is >2,5m one extra fall safety in the middle.

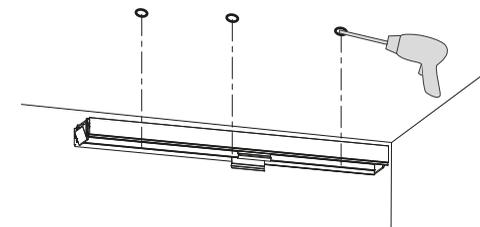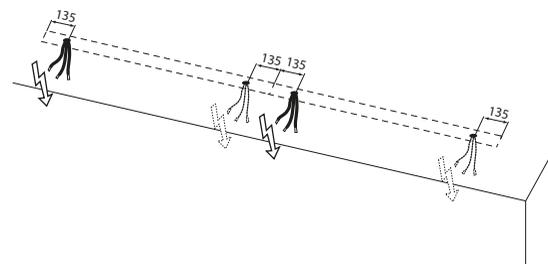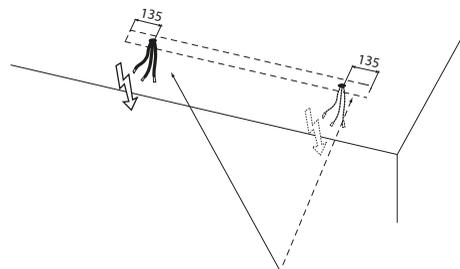


## 4 installation

Supply correct power at the beginning or at the end of the profile at distance 135mm.


When the profile consists out of several pieces, each piece needs power supply.

Use the upper extrusion to copy the hole pattern to the ceiling, drill the holes insert correct plugs and mount the extrusion to the ceiling.


## 5 installation

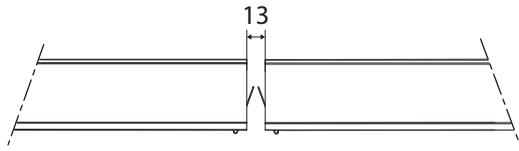

In case of several pieces install the profiles with 13mm distance between the upper extrusions.

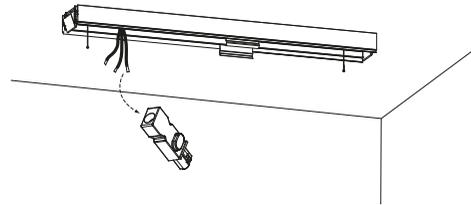


Connect female connector with strain relief to powersupply and dali dim.

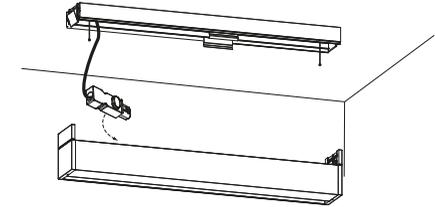


Make correct connection with male connector in the luminaire.


## 6 installation

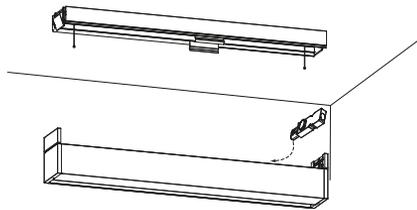

Close the unused connectors at the opposite side with the included female connectors.


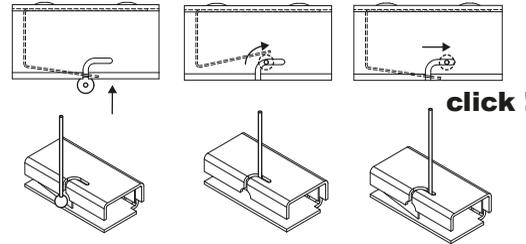


Add cable to fall safety at both ends. When profile is >2,5m one extra fall safety in the middle.

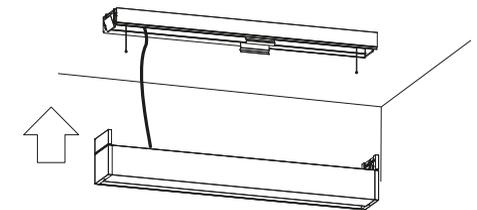

Add profile.



## 7 installation

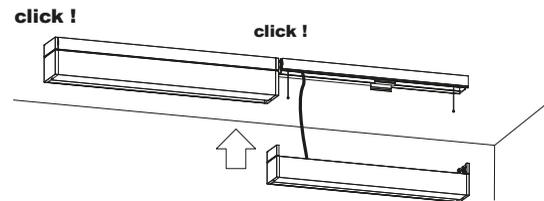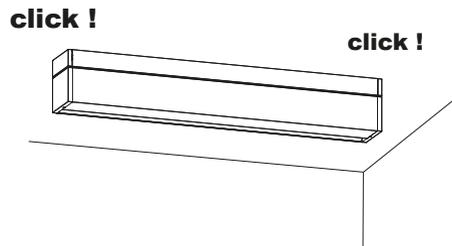

In case of several pieces, repeat previous steps for all pieces.  
Caution: match the inner parts with the corresponding plasterkits!

To disassemble the profiles follow the steps from line 2 on sheet 1.

## in case of wallwasher

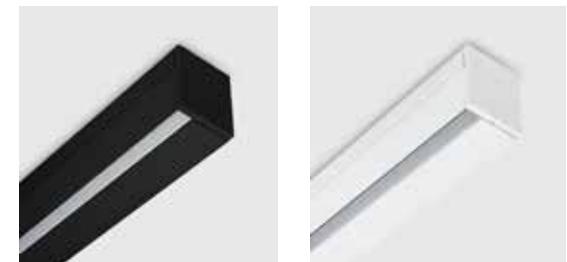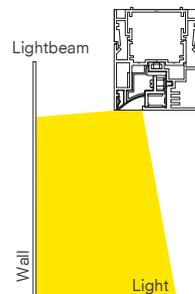

## 8 installation

kreon nv

Industrieweg Noord 1152  
3660 Opglabbeek  
Belgium

Tel + 32 89 81 97 80  
Fax + 32 89 81 97 90

www.kreon.com  
mailbox@kreon.be

revision date: 17/01/2017 | Sheet 2/2  
KR8835501869