

kreon

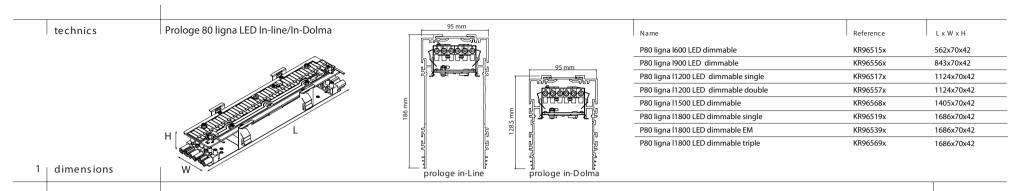

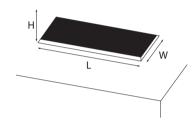

Name	LxWxH
Custom length in-Line Profile	(L+10) x 105 x 245
Custom length in-Dolma Profile	(L+10) x 105 x 190

2 cut out		provide correct cut out in plasterboard	1
	push & pull	Install the gear tray (if not installed yet)	
		Leave the LED tray hanging loose or disconnect connectors during installation of the fixation bolts	place polystyreen cubes in the profile in order to avoid squeezing it during installation
3 installation	Remove the diffuser before placing the profile		profile in order to avoid squeezing it during installation
			and fix with plasterboard screws
4 installation	place profile into cutout (if necessary connect safety bracket)	slide perforated brackets into gap	

