


1 dimensions

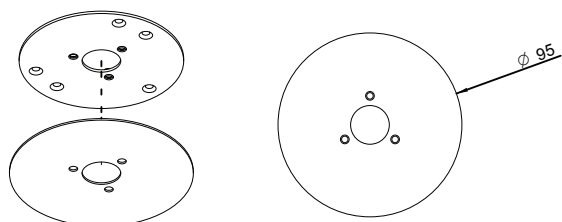


Please make sure that main voltage is disconnected before proceeding!


in case of junction box

in case of concrete (or plasterboard)


2 installation

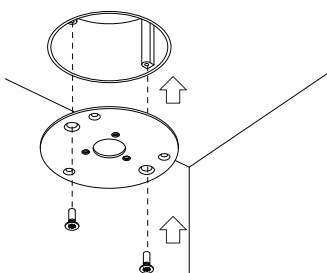


mount the installation plate with two countersunk screws on the junction box (or use the M4 screws delivered with the installation plate)

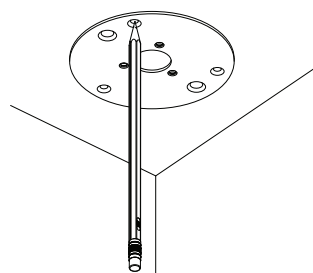


mark the three installation holes (use the installation plate for easily marking the positions)

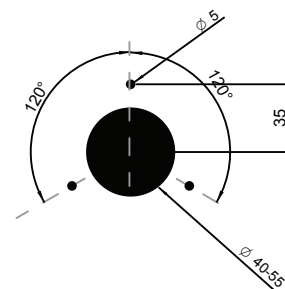


drill three holes of $\varnothing 5\text{mm}$ (depth min. 40mm) for the plugs and one hole in the middle of min.40mm - max.55mm

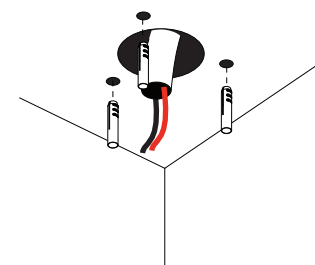



insert the plugs in the holes pull the connection cables through

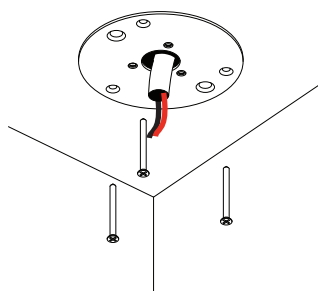

pull the connection cables through the hole in the middle of the installation plate and fix it with 3 screws

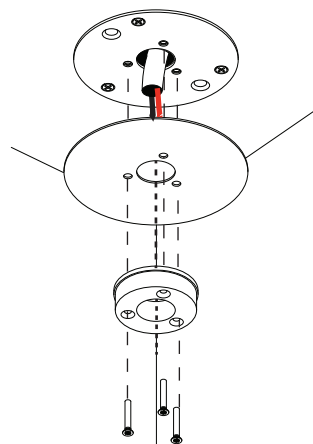

fix the coverplate together with the installation part of the fixture (delivered with the fixture) and three screws against the installation plate

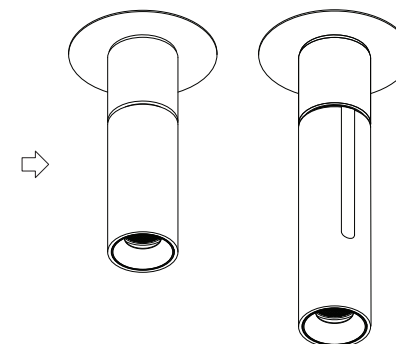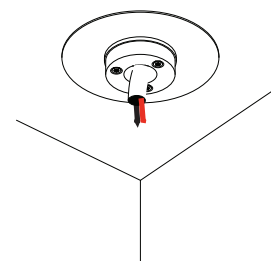

for the installation of the fixture we refer to the installation manuals of the fixtures:
KR8626002024 - holon 40 fixed
KR8622002067 - holon 40 directional surface mounted

installation