


kreon

technics


Prologe 145 Double

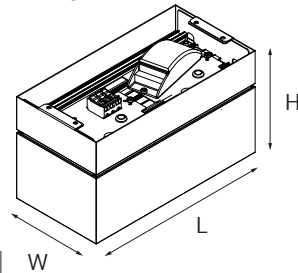


Please make sure that mains voltage is disconnected before proceeding! ⚡

Name	Reference	L x W x H
Prologe 145 double directional qt12-ax	kr98821x	280 x 140 x 155
Prologe 145 double directional ar111	kr98822x	280 x 140 x 155
Prologe 145 double directional hit-tc	kr8728x	280 x 140 x 155
Prologe 145 double hir-ce111	kr98728x	280 x 140 x 155
Prologe 145 double directional AR111	kr9887xx	280 x 140 x 155

1 dimensions

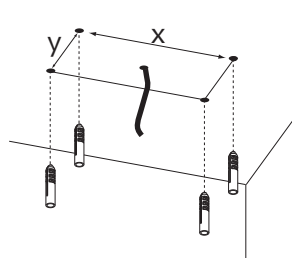


(Ø6mm)
drill holes at correct distance

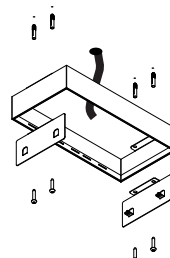

place brackets into ceiling housing and fix with screws


Name	Reference	X/Y
Prologe 145 double directional qt12-ax	kr98821x	260/47
Prologe 145 double directional ar111	kr98822x	260/47
Prologe 145 double directional hit-tc	kr98728x	260/47
Prologe 145 double hir-ce111	kr98728x	260/47
Prologe 145 double directional AR111	kr9887xx	260/47

2 installation

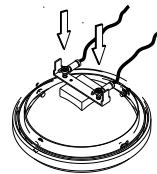


In case of lamp exclusive
Install lamps

in case of AR111/ QR-LP111 lamptype
fasten screws after connection

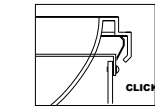


Click the reflector on the ring

2 installation

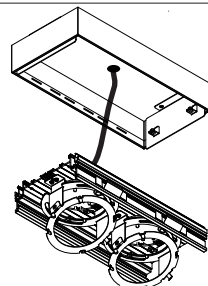

connect to correct voltage


In case of ON/OFF

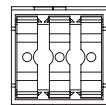

L1 ⊕ N

L1 = Phase
N = Neutral
⊕ = Earthing

In case of dimming

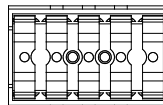

L1 N ⊕ - -

L1 = Phase
N = Neutral
⊕ = Earthing
- = Dimming 1
- = Dimming 2


Name	Reference	Voltage ⚡
Prologe 145 Double directional	kr98821x	230 VDC/12 VDC
Prologe 145 Double directional	kr98822x	230 VDC/12 VDC
Prologe 145 double directional hit-tc	kr98728x	230 VDC
Prologe 145 double hir-ce111	kr98728x	230 VDC
Prologe 145 double directional AR111	kr9887xx	230 VDC/20 VDC

* only use single core cables


3 connection

kreon nv

Rev. date 25/01/2017
KR8800031400

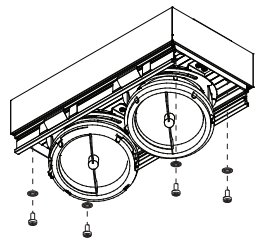


fix chassis to ceiling housing
with screws

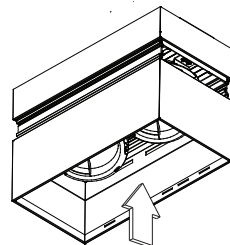


click !

place housing over springs until it clicks.
don't push housing against ceiling housing

4 installation

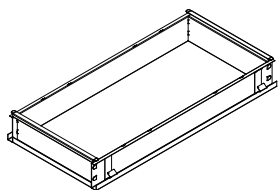

louvre straight

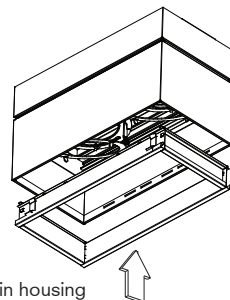

insert louvre in housing


click !



click !


push louvre in until springs click

5 louvre

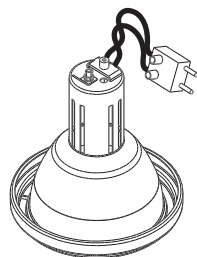

required accessory

or

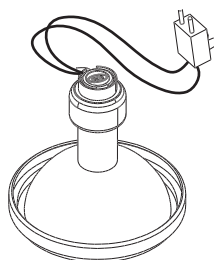

please check the technical
instruction of the HIT-TC,
HIPAR111 set for additional
information on
Prologe 1145 Reflector
installation
KR8800831407

7 accessories



7 picture

kreon nv

Industrieweg Noord 1152
B 3660 opglabbeek
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

Rev. date 25/01/2017
KR8800031400