



technics

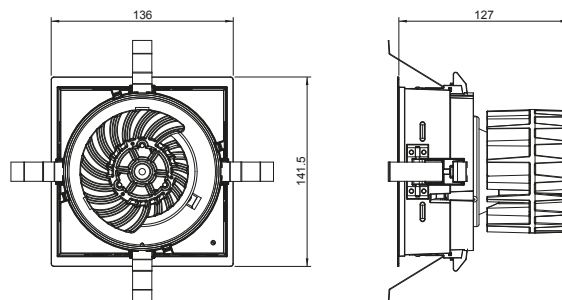

Name	Reference	Voltage	Drive current	H
Down 120 downlight LED	KR95718x	-	500mA or 700mA	127 mm


The luminaire must not under any circumstances be covered with heat insulating covers or similar materials.
Cables must not touch the luminaire housing.
The connection cable must be routed so that it does not touch the lamp when the luminaire is tilted.

1 dimensions

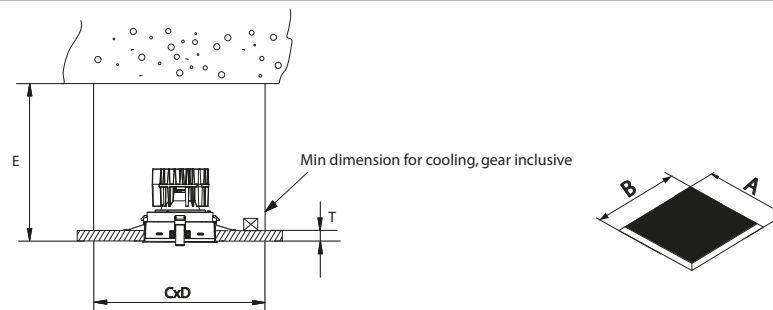


Name	Reference	AxB	CxD	Emin	Tmin-Tmax
Down 120 downlight LED	KR95718x	128x128	350x350	150	
Plasterboard thickness					9-26


2 cut out

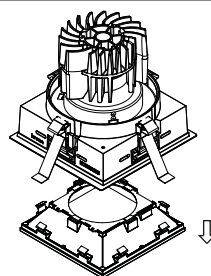


Remove louvre

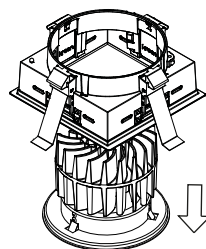


Remove LED module

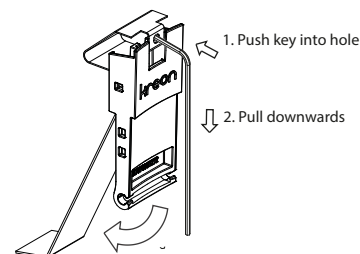


Open spring mechanism (4x) with an allen key.

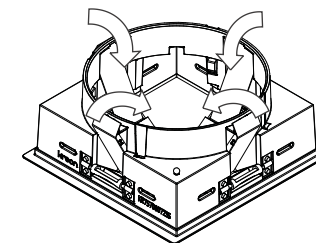


3 installation

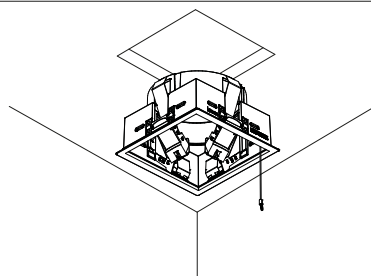


Insert installation box in the hole.



Close spring mechanism (4x).




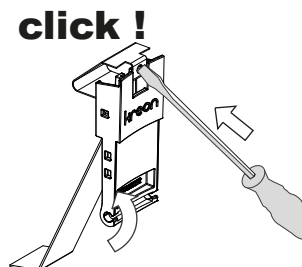


Fix the spring with a tool.



4 installation

technics

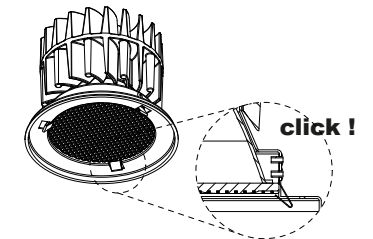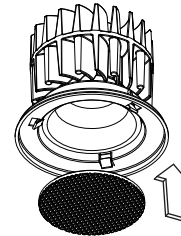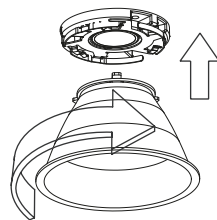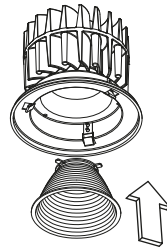


5 installation

Insert the reflector in the movement mechanism.


rotate the reflector in the reflector holder.

Optional: click the filter in place.



Maximum capacity = one filters.

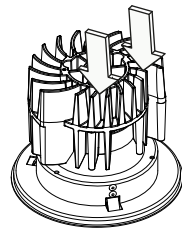

change the filters on top of a flat surface or table to make sure the filter doesn't break!

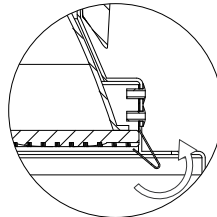

Please make sure that main voltage is disconnected before proceeding!

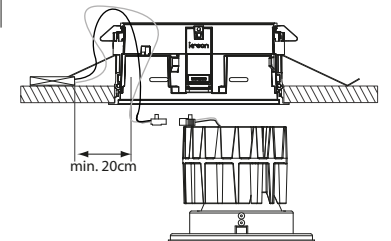

6 installation


To remove filter: take module with both hands and place your thumbs on top of the heatsink

Rotate two filter springs whit you index fingers so the filter can fall out.





install the correct gear with strain relief on the hollow ceiling

important: always check the polarity!!
+ = red wire - = black wire

male connector is already wired as follows




make sure the female connector will be wired like this:

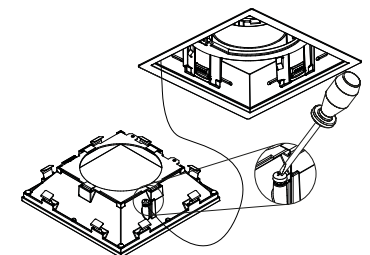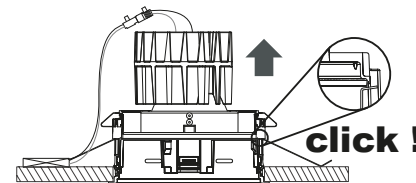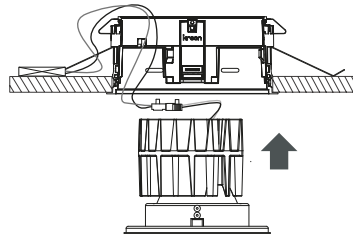

7 installation

Put the assembly in the plasterkit.

Fix the fall safety cable with added screw to the louvre.

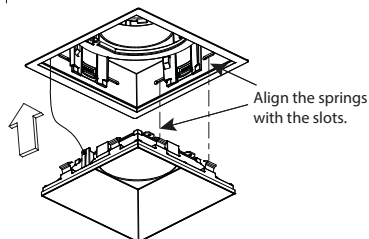

Align the springs with the slots.

8 installation

insert he louvre in the plasterkit

