


kreon


technics

In-Line and In-Dolma : Prologe 80 Single, Double, Triple

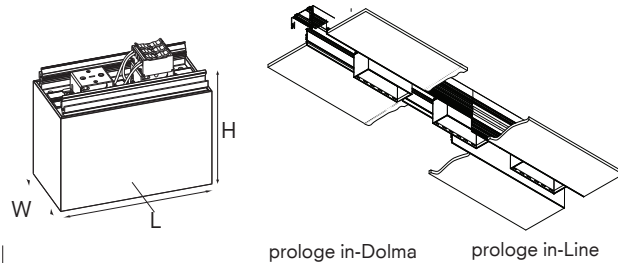

Name	Reference	L x W x H
Prologe 80 in Line / in dolma Single	kr96511x / kr96513x / kr96816x / kr96512x - xxxx	75 x 75 x 175
	kr96542x - xxxx / kr96571x / kr96572x - xxxx	75 x 75 x 175
Prologe 80 in Line / in dolma Double	kr96521x / kr96523x / kr96522x - xxxx	150 x 75 x 175
	kr96552x - xxxx / kr96581x / kr96582x - xxxx	150 x 75 x 175

1 dimensions



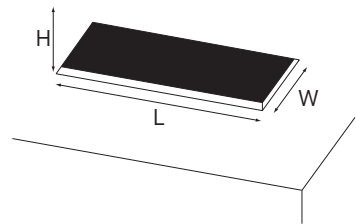


Please make sure that mains voltage is disconnected before proceeding! ⚡

Name	Reference	L x W x H
Custom length in-Line Profile		(L+10mm) x 105 x 245
Custom length in-Dolma Profile		(L+10mm) x 105 x 190
Plasterkit Prologe 80 in-Line Single	kr765114	102 x 105 x 245
Plasterkit Prologe 80 in-Line Double / Single Direct.	kr765214	177 x 105 x 245
Plasterkit Prologe 80 in-Line Triple / Double Direct.	kr765314	252 x 105 x 245
Plasterkit Prologe 80 in-Line	kr765814	627 x 105 x 245

2 cut out

provide correct cut out in plasterboard

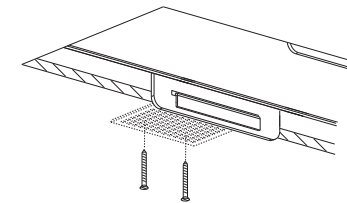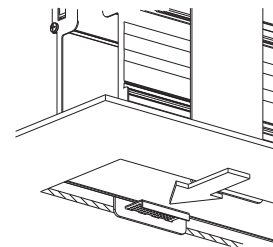
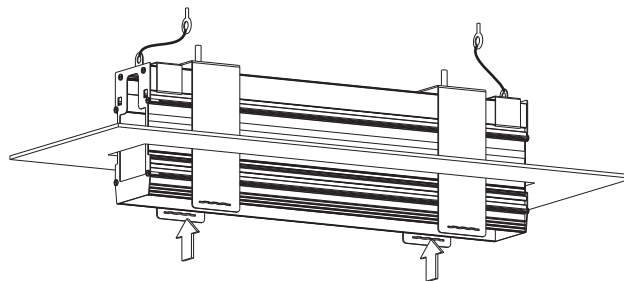


3 installation

place profile into cutout and connect safety bracket

slide perforated brackets into gap


and fix with plasterboard screws

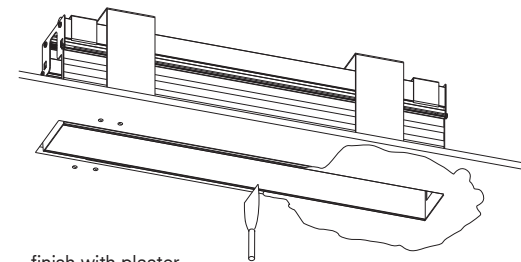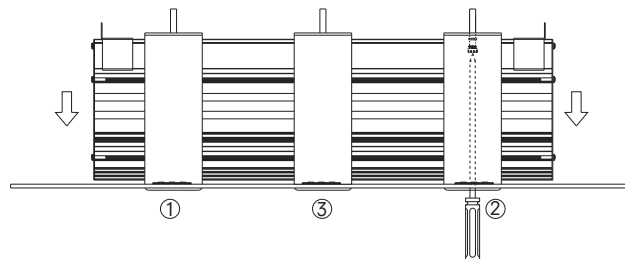

4 installation

lower profile by turning adjusting screws in the correct order

finish with plaster
kreon recommends polyester filler 2K

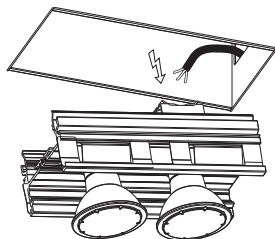


apply correct voltage
and install lamps


* only use single core cables

Name	Reference	Voltage ⚡
Prologe 80 Single	kr96511x / kr96513x / kr96516x / kr96512x - xxxx	230 V
Prologe 80 Single	kr96542x - xxxx / kr96571x / kr96572x - xxxx	230 V
Prologe 80 Double	kr96521x / kr96523x / kr96522x - xxxx	230 V
Prologe 80 Double	kr96552x - xxxx / kr96581x / kr96582x - xxxx	230V



5 connection

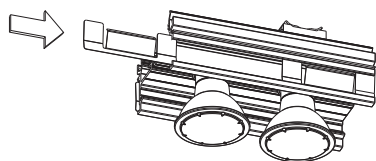

slide springs in chassis

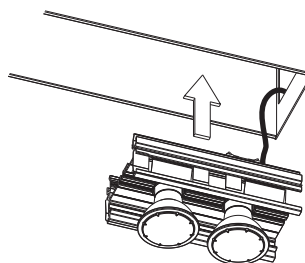


click chassis in profile

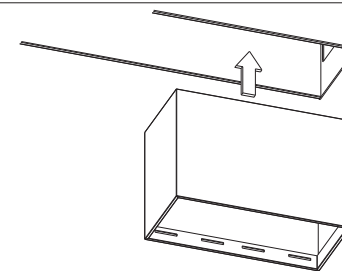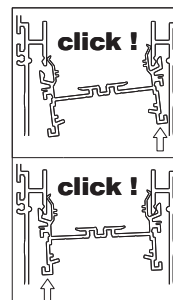


click the housing in the chassis


6 installation

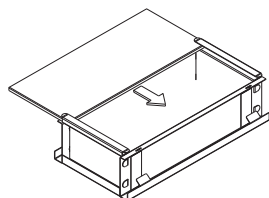


① slide the glass in the louvre.

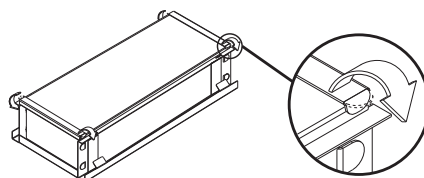

② fold lips around glass

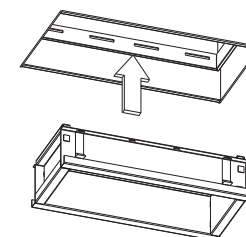


③ insert louvre in housing

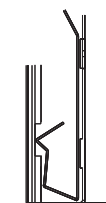

④ push louvre in until springs click

7 accessories

optional : frosted glass except for q-par 16 applications

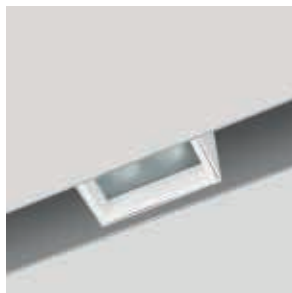

8 picture

kreon nv

Frankrijklei 112
B 2000 Antwerpen
Belgium


Tel + 32 3 231 24 22
Fax + 32 3 231 88 96

www.kreon.com
mailbox@kreon.be


Rev. date :27/03/2006
KR8650031367

technics


Louvre dark grey, Louvre matt alu

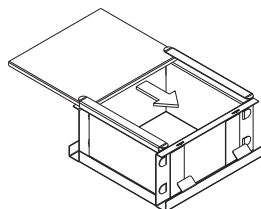

① slide the glass in the louvre.
glass is optional

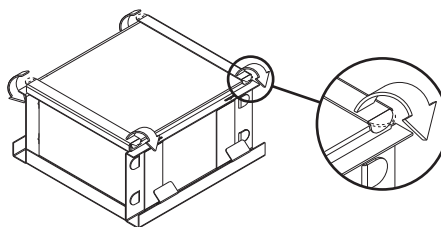

② fold lips around glass

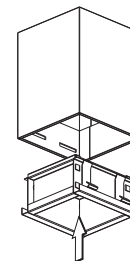

③ place louvre in device



click !

④ push louvre in until springs click

1 installation

Name	Reference	Frosted glass (optional)
louvre dark grey	kr760103	kr760109
louvre dark grey	kr760203	kr760209
louvre dark grey	kr760303	kr760309
louvre dark grey	kr760803	incl.
louvre dark grey	kr780103	kr780109
louvre dark grey	kr780203	kr780209
louvre matt alu	kr760100	kr760109
louvre matt alu	kr760200	kr760209
louvre matt alu	kr760300	kr760309
louvre matt alu	kr760800	incl.
louvre matt alu	kr780100	kr780109
louvre matt alu□	kr780200	kr780209□
darklight louvre (inclusive)	kr965863,964863,968863	

2 specifications



3 picture

kreon nv

Frankrijklei 112□
B 2000 Antwerpen
Belgium

Tel + 32 3 231 24 22
Fax + 32 3 231 88 96

www.kreon.com
mailbox@kreon.be

Rev. date :22/10/2004
KR8000001335