




kreon

technics

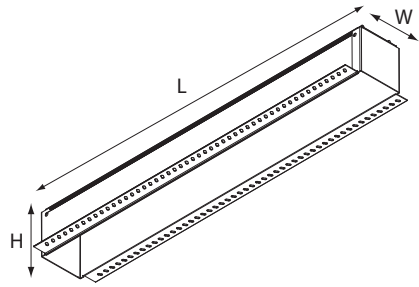

Name	Reference	L x W x H	Cut-out L x W x D
Rei trimless recessed	kr783040	Lx73x78	Lx75x108




1 dimensions

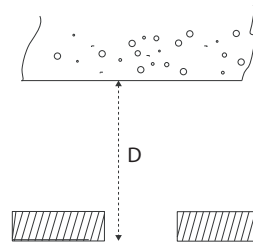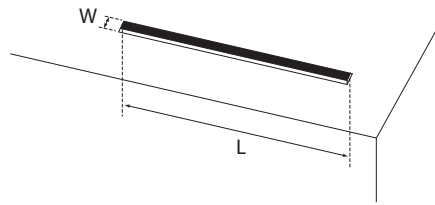

Please make sure that main voltage is disconnected before proceeding! ⚡

2 cut-out

Make cut-out in plasterboard (see table LxWxD).

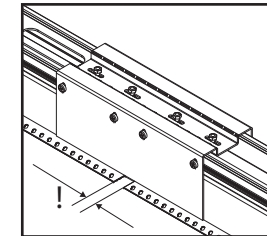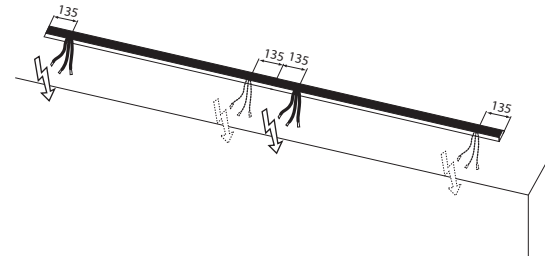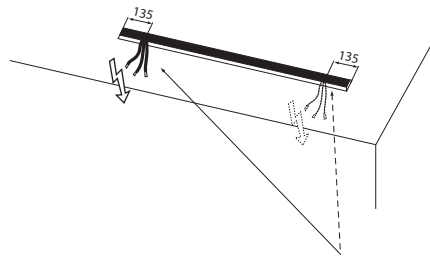

!
The connection bracket is required. Without using this bracket, the product cannot be placed correctly and the safety will be no longer assured.

3 installation

Supply correct power at the beginning or at the end of the profile at distance 135mm.

When the profile consists out of several pieces, each piece needs power supply.




In case of several pieces, connect them with the bracket. The distance between the profiles will be defined by the connection bracket.


4 installation

Don't remove aluminium extrusion parts.
Don't remove fall safety cable.

Pull wire through the hole of the profile and put the profile into the ceiling


Fix the profile with installation brackets

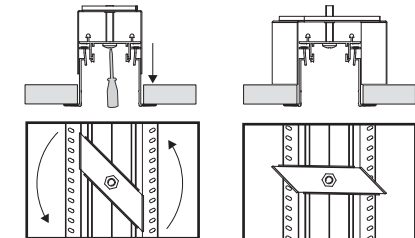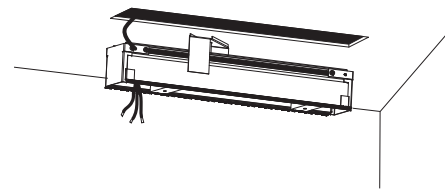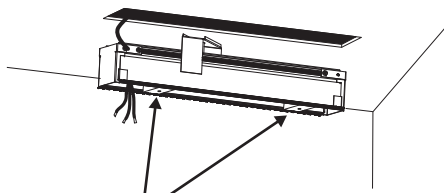

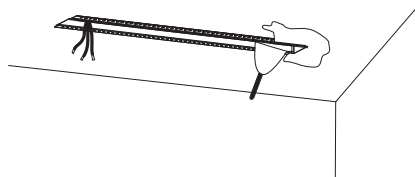


5 installation

Fill around perimeter of plasterkit using suitable filler and plaster to hide screws and plasterkit.

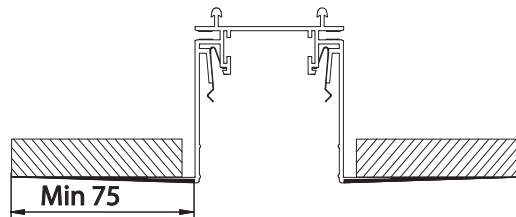

Minimum filler distance, spread out until zero.

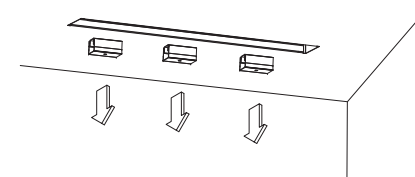

Remove aluminium extrusion parts.

6 installation

7 installation

8 installation