
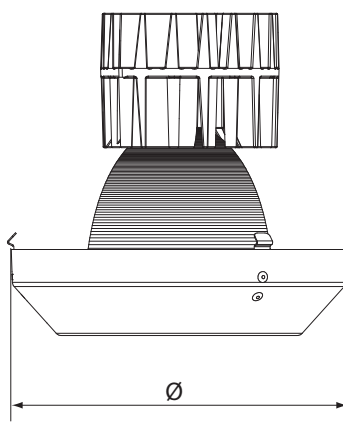
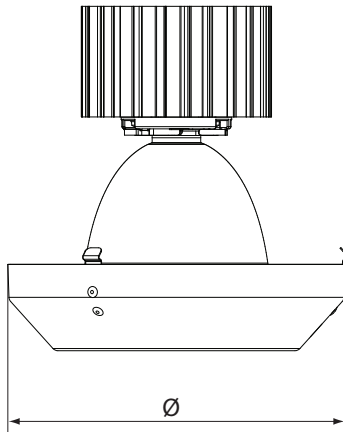
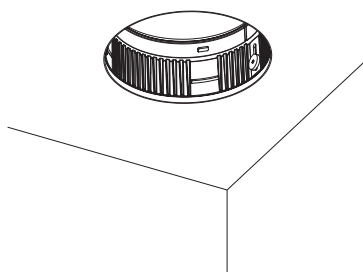
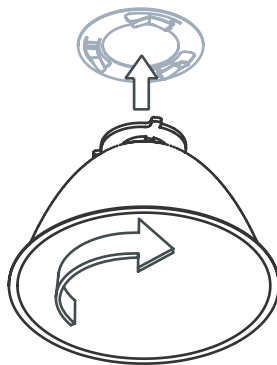
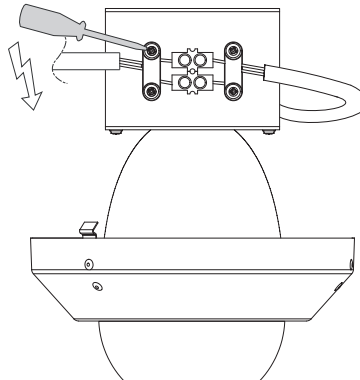
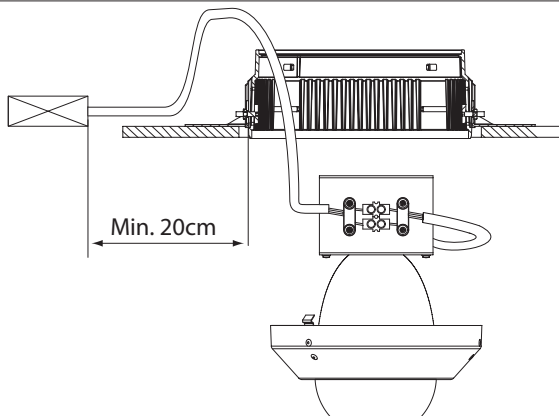
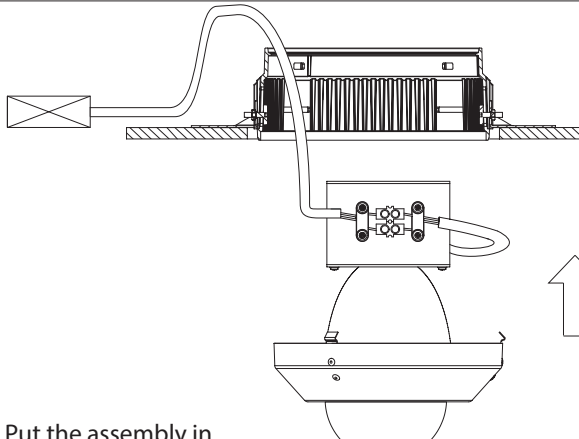
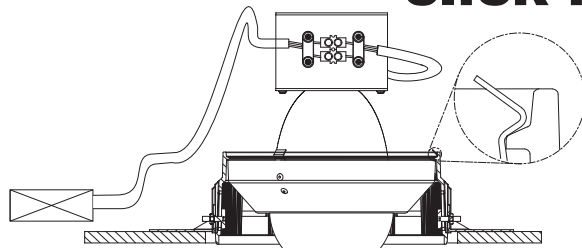
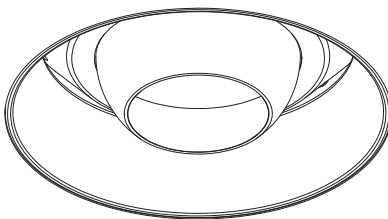



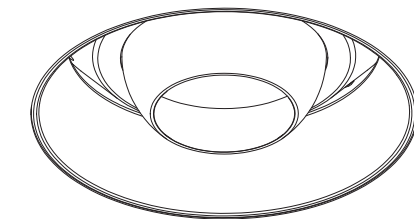
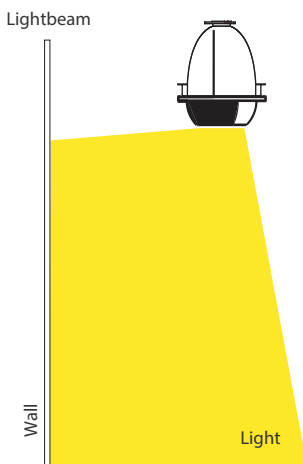



	technics	 				<table><tr><th>Name</th><th>Reference</th><th>current</th><th>Ø</th></tr><tr><td>aplis-in line 165/ down in line 165 wall washer</td><td>KR917431-X-XXXX</td><td>700mA</td><td>152</td></tr><tr><td>aplis-in line 165/ down in line 165 wall washer 3000lm</td><td>KR917431-XXXX</td><td>1050mA</td><td>152</td></tr></table>	Name	Reference	current	Ø	aplis-in line 165/ down in line 165 wall washer	KR917431-X-XXXX	700mA	152	aplis-in line 165/ down in line 165 wall washer 3000lm	KR917431-XXXX	1050mA	152
Name	Reference	current	Ø															
aplis-in line 165/ down in line 165 wall washer	KR917431-X-XXXX	700mA	152															
aplis-in line 165/ down in line 165 wall washer 3000lm	KR917431-XXXX	1050mA	152															
1	dimensions	  Please make sure that main voltage is disconnected before proceeding!  																
2	installation	To install the plasterkit. See installation manual KR8200001623.  install the reflector on the LED module. the reflector is fixed by turning it on the LED, underneath the bajonet ring  click !  																
3	installation	In case of transformer or ballast.  Put the assembly in the plasterkit.  Do not cover the luminaire with matting material!  To install the louvre see manual KR8170001643. 																
4	installation	 																

technics

In case of precast concrete panels,
gear inclusive.

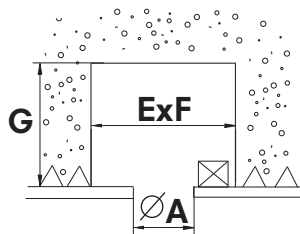


In case of finished concrete ceiling,
gear exclusive.

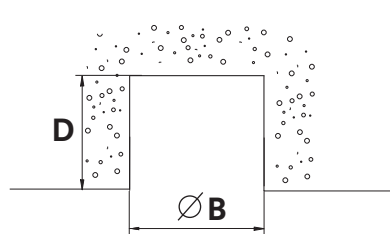


Name	Reference	Lamp type	ØA	E	F	G	B	ØD
Concrete plasterkit aplis IL 80 (shadow gap)	KR717101 (9)	QR-CBC51	140	320	320	200	170	130
		LED dir	140	300	300	157	170	140
		LED fixed, WW	140	260	260	100	250	100
		Audio	140	200	200	130	150	130
Concrete plasterkit aplis IL 120 (shadow gap)	KR707201 (9)	LED dir., fixed	140	305	305	200	305	200
		LED low	140	390	390	150	305	237
Concrete plasterkit aplis IL 165 (shadow gap)	KR717201 (9)	QT12-ax	200	200	450	200	210	195
		QR-LP111	200	200	450	230	210	178
		HIT_TC	200	200	450	230	210	225
		HIR-CE111	200	200	450	230	210	203
		LED dir.	200	280	450	230	210	230


1 cut out

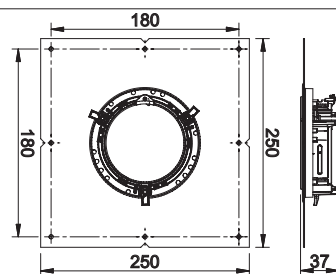

Aplis in-line 80



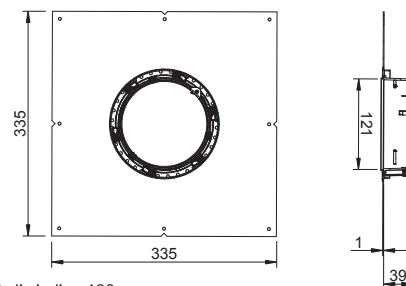


Aplis in-line 120

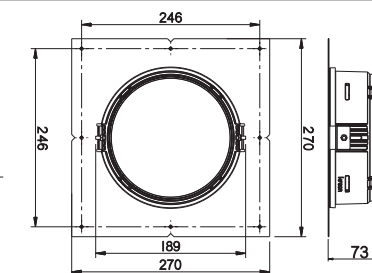

Aplis in-line 165

2 dimensions

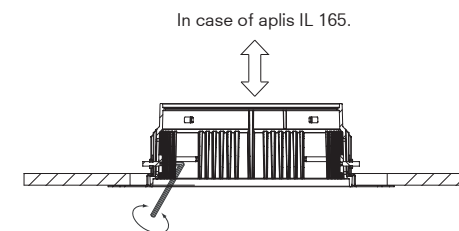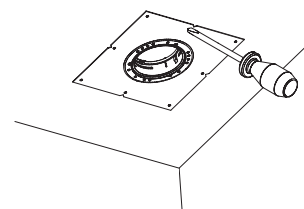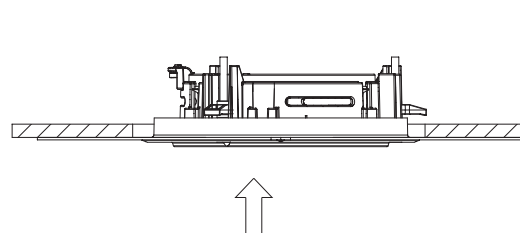



Align the box with the plasterboard using the thumb screw.
Fix these screws with a hexagon screw key.

3 installation

Put the plasterkit through the hole.

Fix the plasterkit with screws.

In case of 80 range
please make sure that
sticker is removed
before proceeding!

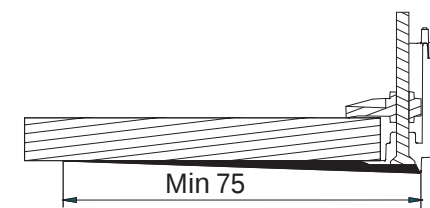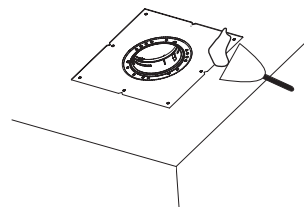

4 installation

Fill around perimeter of plasterkit using suitable filler
and plaster to hide screws and plasterkit.

Minimum filler distance, spread out until zero.

kreon nv

Industrieweg Noord 1152
3660 Opglabbeek
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

revision date: 28/04/2016
KR8170001800