

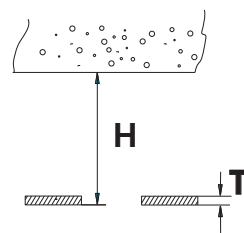
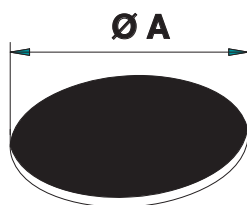


technics

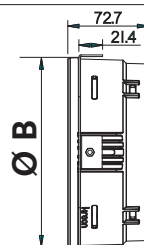

Name	Reference	Ø A	H _{min}	T _{min} -T _{max}
Plasterkit box without shadow gap	KR717204	186		
Plasterkit box with shadow gap	KR717208	186		
In case of QT12-ax type	KR917813		195 ✓ 200 ✓	
In case of QT12-ax Wall Washer type	KR917413		170 ✓ 175 ✓	
In case of HIT-TC type	KR917883		225 ✓ 230 ✓	
In case of HIT-TC Wall Washer type	KR917483		200 ✓ 205 ✓	
In case of QR-LP111 type	KR917823		178 ✓ 230 ✓	
In case of HIR-CE111 type	KR917853		203 ✓ 230 ✓	
In case of LED type	KR917833		255	
In case of Audio	KR91789x		155	




1 cut out

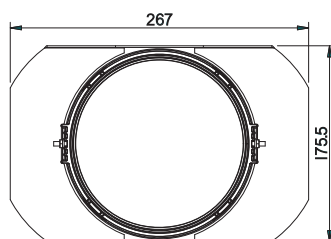

Plasterboard thickness 9-26

Name	Reference	Ø B
Plasterkit box without shadow gap	KR717204	171
Plasterkit box with shadow gap	KR717208	177

2 dimensions

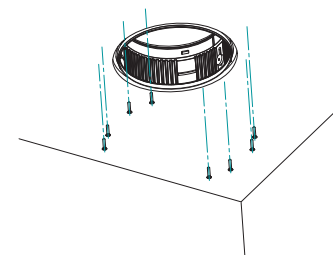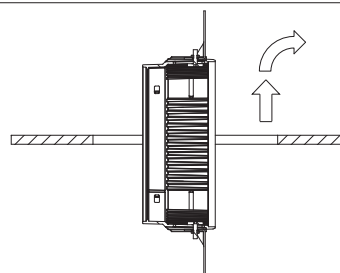
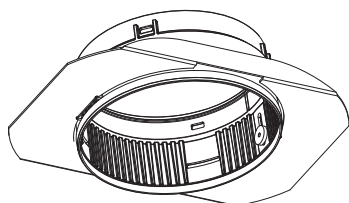


3 installation

Insert the plasterkit through the hole on the ceiling

Fix the plate with plasterboard screws

4 installation

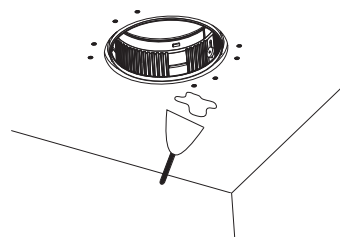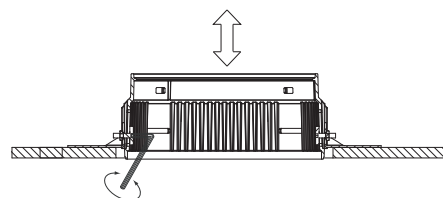

Align the box with the plasterboard using the thumb screw.
Fix these screws with a hexagon screw key.

Fill around perimeter of plasterkit using suitable filler and plaster to hide screws and plasterkit.