
kreor

technics	₹ W	Name		Reference	LxWxH
		Rei wallwasher reces	sed profile - on/off	KR98324x	Lx58x70
	L	Rei wallwasher reces	sed profile - 1-10V	KR98384x	Lx58x70
		Rei wallwasher reces	sed profile - dali (no touch dim)	KR98354x	Lx58x70
		Rei downlight recesse	ed profile - on/off	KR99324x	Lx58x70
		Rei downlight recesse	ed profile - 1-10V	KR99384x	Lx58x70
	H	Rei downlight recesse	ed profile - dali (no touch dim)	KR99354x	Lx58x70
1 dimensions					
				P /	
2 installation	To install the plasterkit. See installation manual KR8830401868.	Connect female connector with strain relief to powersupply and dali dim.	Make correct connection with male connector in the luminaire.		
		click!			
3 installation	Close the unused connectors at the opposite side with the included female connectors.	Add cable to fall safety at both ends. When profile is >2,5m one extra fall safety in the middle.	Add inner profile		
	click!		3	15 To	4
4 installation		In case of several pieces, repeat previous steps for all pieces. Caution: match the inner parts with the corresponding plasterkits!	To remove the innerpart, add remove	er-tool at one side.	


kreon

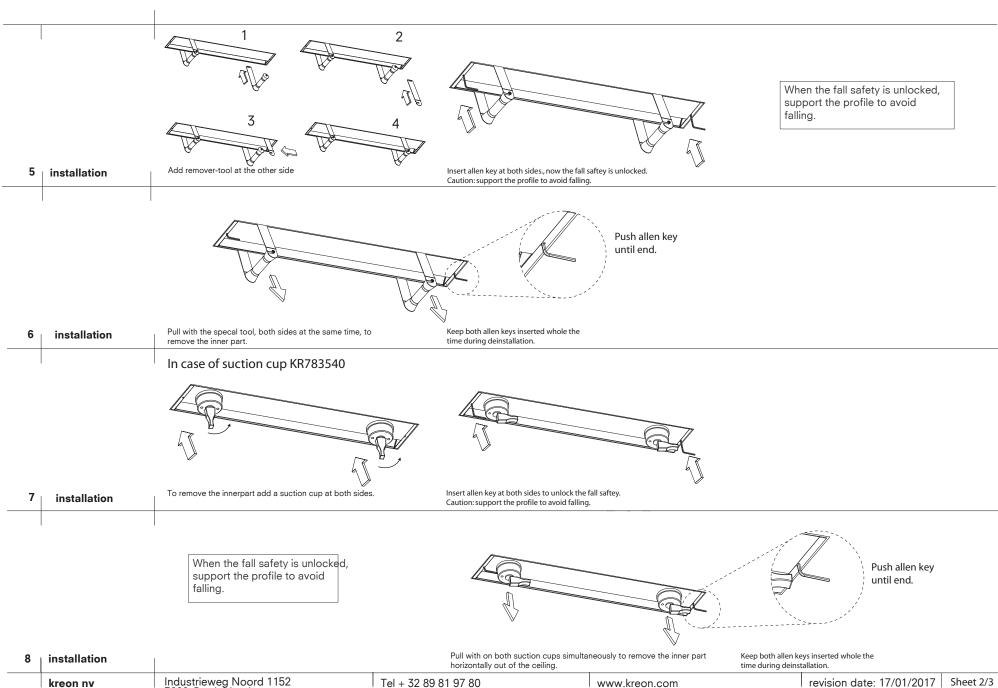

Industrieweg Noord 1152 3660 Opglabbeek Belgium

Tel + 32 89 81 97 80 Fax + 32 89 81 97 90 www.kreon.com mailbox@kreon.be revision date: 17/01/2017 | Sheet 2/3 KR8835401835

kreon

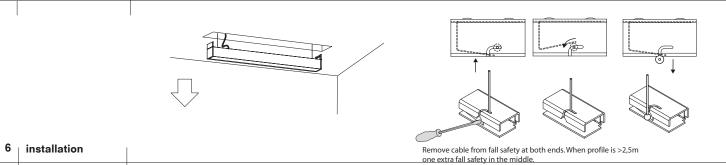

7	installation

kreon nv

8	installation				
		in case of wallwasher	Lightbeam Light		
9	installation				

Industrieweg Noord 1152 3660 Opglabbeek Belgium

Tel + 32 89 81 97 80 Fax + 32 89 81 97 90 www.kreon.com mailbox@kreon.be revision date: 17/01/2017 | Sheet 3/3 KR8835401835