

kreon

technics

Name


Reference

Prologe 80 Single

kr96711x / kr96811x / kr96813x


Prologe 80 Double

kr96721x/kr96821x/kr96823x

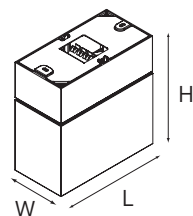


Please make sure that main voltage is disconnected before proceeding! ⚡

1 dimensions

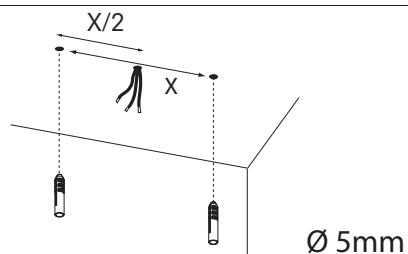


distance x for single : 54 mm
double : 126 mm

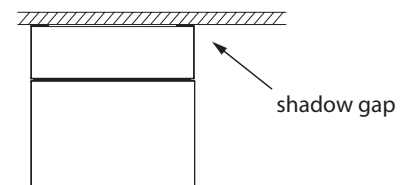

2 installation

drill holes at correct distance

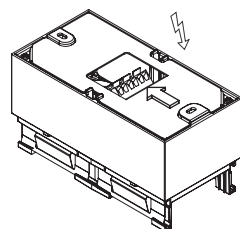

Name

Reference

Voltage ⚡

Prologe 80 Single

kr96711x / kr96811x

230 V / 12 V

Prologe 80 Single

kr96813x

230 V *

Prologe 80 Double


kr96823x/kr96821x/kr96823x

230 V *


* only use single core cables

3 connection

connect to correct voltage


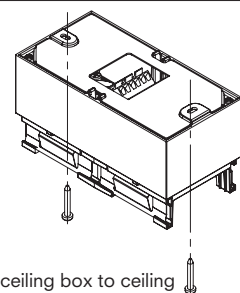


fix ceiling box to ceiling with screws

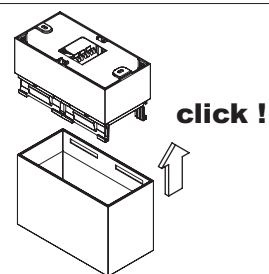


click !

place housing over springs until click.
don't push housing against ceiling housing

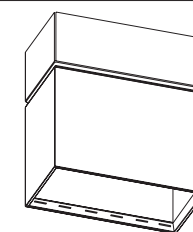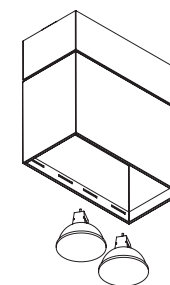


4 installation

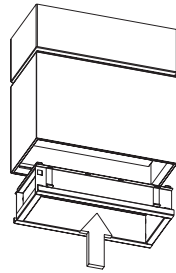


click !

5 louvre


insert louvre in housing

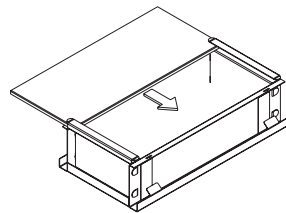


① slide the glass in the louvre.
glass is optional

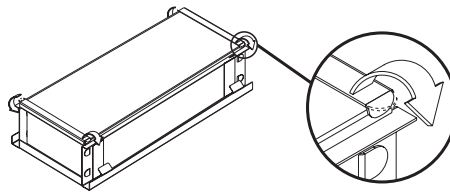

② fold lips around glass

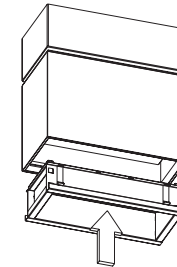

③ place louvre in device

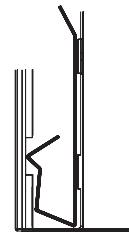

click !

④ push louvre in until springs click

6 accessories



7 picture

kreon nv

Industrieweg Nood 1152
3660 Oplabbek
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

Rev. date: 03/12/2009
KR8600001714