


kreon

technics

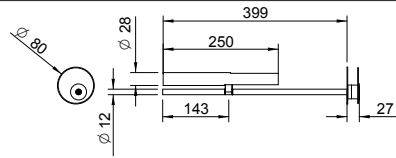

Single

Name

Reference

Drive current

Max wattage

Esprit single ceiling

KR96301x

700mA

2 W


Esprit double ceiling

KR96302x


700mA

2x2 W


1 dimensions

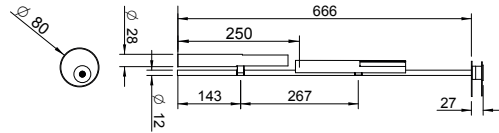

Double

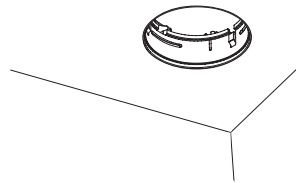

Please make sure that main voltage is disconnected before proceeding!




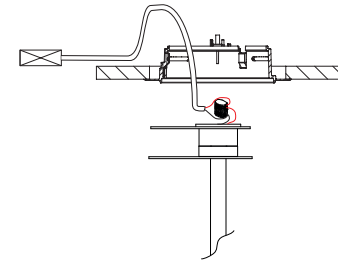


Important:
always check the polarity!!
+= red wire
- = black wire

2 installation

To install the plasterkit.
See installation manual KR8170001755.

Install the correct gear with strain relief on the hollow ceiling. Make connection to the driver with the connection clips. Connect red to red and black to black.

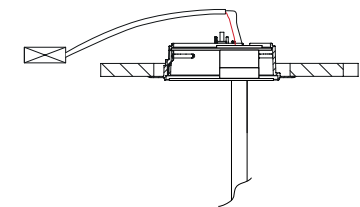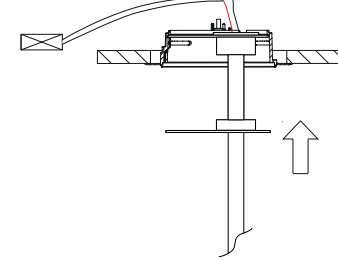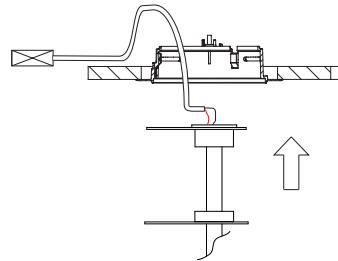
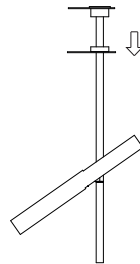


3 installation

Detach coverplate with magnet from the installation plate.

Put the assembly in the plasterkit.

Attach coverplate with magnet to the installation plate.

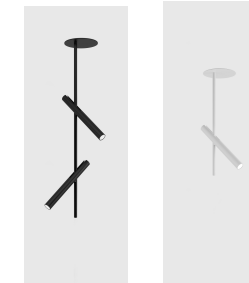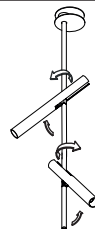

4 installation

Aim the fixtures, 360° rotation and 90° inclination.

kreon nv

Industrieweg Noord 1152
3660 Oplabbek
Belgium

Tel + 32 89 81 97 80
Fax + 32 89 81 97 90

www.kreon.com
mailbox@kreon.be

revision date: 23/12/15
KR8630002092

Sheet 1/1