

kreon

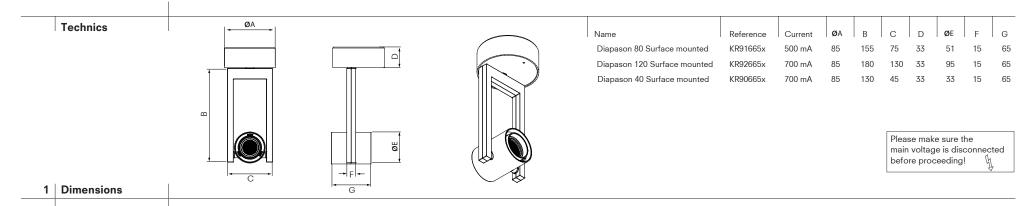


In case of preinstalled LED driver on remote




Drill three holes of \varnothing 6mm (depth min. 30mm) for the plugs and one hole in the middle of ± 18 mm for the cable throughput

Use the installation part as a template

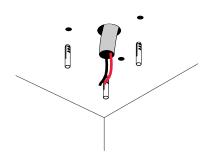


Insert the plugs in the holes

Pull the connection cables (which have been prewired to an LED driver) through

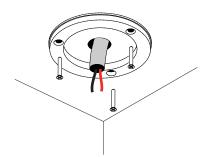

Fix the installation part with the 3 screws

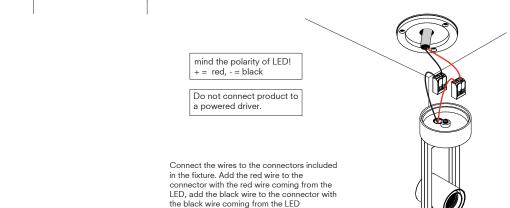


Fix the rest of the fixture by screwing it onto the installation part

Installation

2 Installation

revision date: 12/04/2017 KR8166002173

kreon

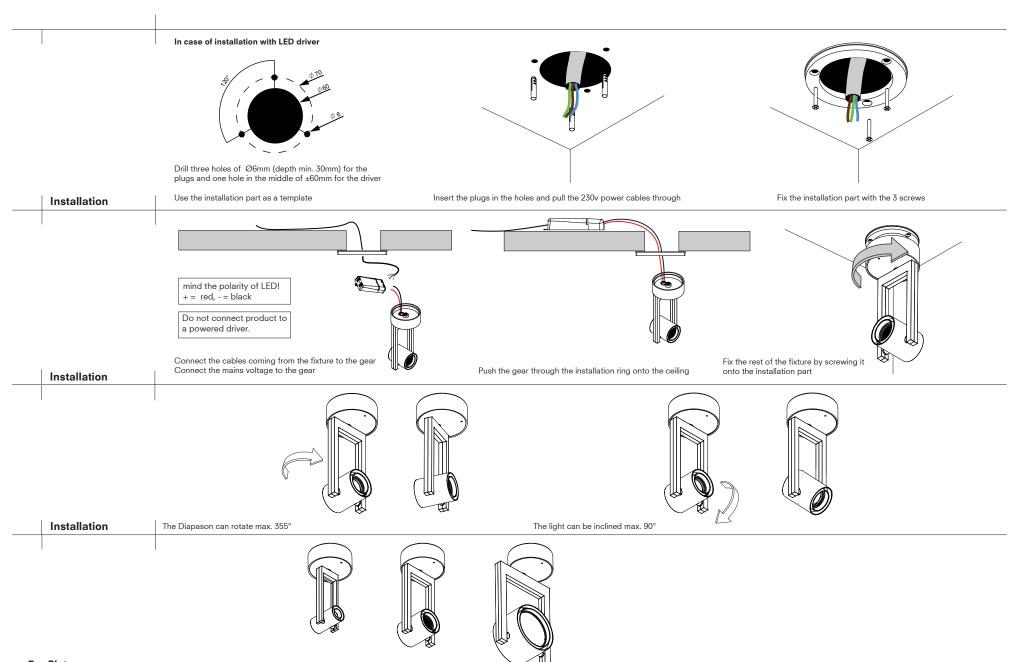

Belgium